

MODEL AP 95 - AP96 Kurulum

DISASSEMBLY AND ASSEMBLY

1- Disassembly

To replace the spring (11), or clean any of the internal components of the valve, proceed in the following manner:

A- Withdraw the clip (20), using a punching tool, and lift the lever (19).

B- Unscrew the cap (2) and remove.

C- Holding the rod (16) (17) steady, loosen the hollow screw nut (8), until the constructive limit, and the hollow screw (7) until you note a releasing of the spring (11).

D- Unscrew the body (1) holding the rod (16) (17) and the seat (13) (14) steady.

E- Lift the body (1) and you will have acces to all the components.

2- Assembly

A- Enter the body (1) and the joint (15) through the upper part the rod (16) (17).

B- Turn the body (1) holding the rod (16) (17) and the seat (13) (14) steady.

C- Replace the hollow screw (7) with the hollow screw nut (8).

D- Adjust the set pressure with the hollow screw (7) and fix the adjustment position with the hollow screw nut (8).

E- Change the coupling (18) and lightly tighten the cap (2).

F- Place the lever (19) and fix it with the clip (20).

ADJUSTING THE SET PRESSURE

A- Proceed according to DISASSEMBLY A, B, C.

B- Proceed according to ASSEMBLY D, E, F.

